



Slotted ad Folded Corrugated Fibreboard

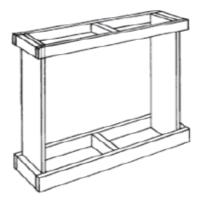

Wood Construction

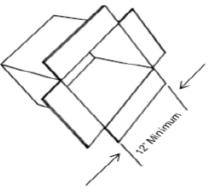

Tube Type Corrugated Fibreboard

Figure 3.24 Examples of fillers to occupy unfilled crosswise space (paragraphs 3.1.5, 3.2.1.4, 3.2.1.6, 3.2.2.3, 3.2.2.5, 3.3.1.5, and 3.4.8.2)