



Innovators of Freight Securement Systems®

Logipad®

The the one-way solution for securing light weight loads with metal load locks.

Installation Guide



The complete Installation Guide for Logistick's Logipad®.

For best results, please read through all instructions prior to installation.

Materials Needed


- Logipad®
- Metal load lock
- Dry Cloth
- Scraper (optional)
- Rubbing Alcohol (optional)
- Saw (optional)

1. Choosing the Application Area

After loading the cargo, determine the best location for installation. Keep in mind that multiple sets of Logipad® may be needed to safely secure your cargo. Choose an area that will place the Logipad® at the same height and position, assuring the load lock will be installed parallel to the floor. The load lock needs to be against the freight, which will prevent the cargo from starting to shift.


2. Prepping the Application Area

The entire application area must be clean and dry to ensure proper installation. Use a dry cloth, and if needed, a scraper and rubbing alcohol to remove loose dirt, dust, condensation or frost from the application area.

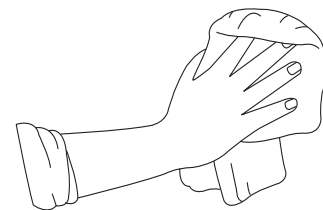


3. Positioning the Load Lock

Position the load lock against the freight, with the ratchet end pointed up or away from freight. Place the load lock 6 inches above desired application area. Make sure that the load lock is level. Ratchet into place.

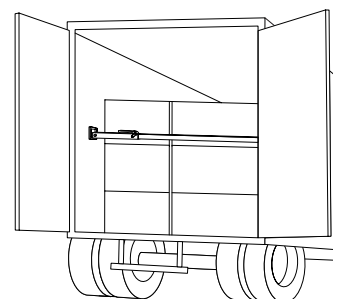

4. Adhering Logipad®


Remove the tape backing from first Logipad® and place on the wall directly BELOW the load lock. Press firmly to apply the Logipad® securely to the wall. Remove tape backing from second Logipad® and place on the opposite wall in the same position, below the load lock.

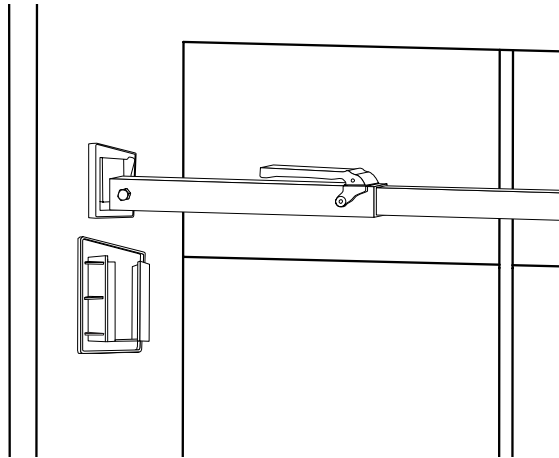

IMPORTANT: Once Logipad® is installed, it cannot be repositioned.

5. Securing the Load Lock


Release load lock from wall and slide both pad ends into the pockets of the Logipad®. Reinstall load lock, making sure it is locked and secured to ensure that wall pressure is maintained.

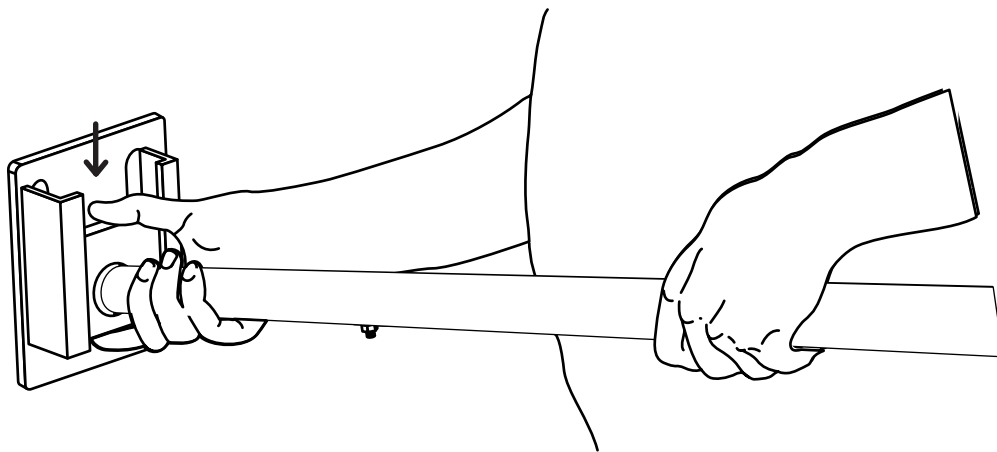

Optional Installation guide for tamper evident Security Seals. (Sold Separately)

6. Installing Security Seals

Locate the holes on the upper section of the Logipad®. Run the loose seal wire through both holes and underneath the load lock forming a complete loop, meeting at the body of the seal. Pull loose wire through the body of the seal until it is tight and secure. Caution, once the wire has passed through the body of the seal, it's locked in place. Contact a Logistick representative for more details.

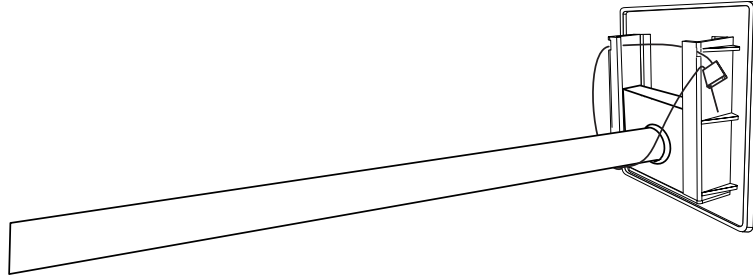

Logistick.com

If you have any questions about this product or any
of our other products please email us at
sales@logistick.com

**Thank you for your business and
continued partnership.**



Scan for full video!



Innovators of Freight Securement Systems®



Innovators of Freight Securement Systems®

Logipad®

The one-way solution for securing light weight loads with metal load locks.

Removal Guide




The complete Removal Guide for Logistick's LogiTrack®.

Materials Needed

- Prybar
- Cloth (optional)
- Scraper (optional)
- Citrus Based Adhesive Remover (optional)

1. Removal of Logipad®

If present, remove security seals. Release pressure from load lock and slide the load lock out of the Logipad®. Place prybar in the removal slot located on the bottom of the Logipad® and pry downward and away from the wall with slow and steady pressure until the Logipad® is removed.

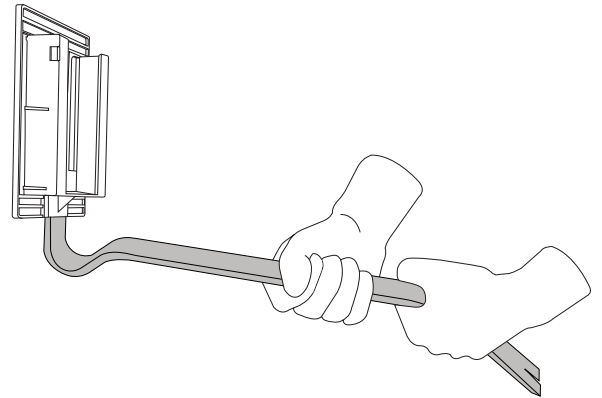

3. Removing Tape Remnants

Use a cloth, and if needed, a scraper and a citrus based adhesive remover to clean any remaining tape residue from the trailer walls.



Scan for full video!



Innovators of Freight Securement Systems®

Revised October 2022
L.21